

# Resistance Transmitter v1 BRT283

#### **DESCRIPTION**

The BRT283 is a isolating transmitter that measures the resistance of a probe or sensor. A constant current is applied to the input device and a change of resistance value causes the voltage to change. The precision current source is adjustable by a 15-turn potentiometer located on the input card. The measured input is then scaled by a isolating transmitter with a link selectable output providing true 3-way galvanic isolation up to 2000V rms.

A wide range ac/dc power supply powers the input and the output circuit with three way power/input/output isolation. Final calibration is trimmed using the front accessible ZERO and SPAN 15-turn trim adjustments. The output signal level is indicated by a green LED on front giving a clear indication of module function. Reverse or direct action are factory configured. Special requirements for input/output response time variation can be accommodated by optional the "output ramp" option or the three standard link selectable response times.

# **General Specifications**

Size: 23.5W x 71.5H x 109D (mm). Mounting: Clip for 35mm DIN-Rail.

Housing material: ABS.

Connection: Screw terminals. Weight: 106 g.

Weight: 106 g.
Protection class: IP40.
Front SPAN adjust: ±25% typical.
Front ZERO adjust: +20/-10% typical.
Operating temperature: -10...+60°C.

Output: Programmable - see table overleaf.

Calibration accuracy: <0.5%. Linearity: <0.5%.

Temperature drift error: <0.5% within operating range (not taking account of input lead resistance).

Response time: Programmable - see table overleaf.

Optional internal offset adjust:  $\pm 50\%$  typical. Input range:  $50\Omega$  up to  $10k\Omega$ . Excitation current: 0.6mA max.


Supply voltage: 85-265Vac 50/60Hz (90–280Vdc) 16-42Vac 50/60Hz (10-60Vdc) .

Supply/Input/Output Isolation: >2kV r.m.s.

Electromagnetic compatibility: Complies with EN 50081-1, EN 50082-2, EN 61010-1

 $\epsilon$ 

#### **Connections**

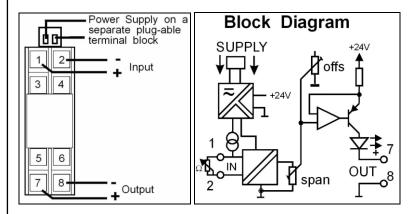

For input / output combinations refer to TYPE NO. DESIGNATION overleaf.

 BASI Instrument AB
 Tel: +46 40-880 09
 Fax: +46 40-92 98 77

 P.O. Box 53
 SE-275 06 VOLLSJÖ.....SWEDEN
 E-mail: sales@basi.se
 Page: 1

 Resistance Transmitter v1
 BRT283
 No. DS 83:10-E Issue: 9 10/08/11



# TYPE NO. DESIGNATION

Power Supply:-1 = 85-265Vac 50/60Hz (90–280Vdc) 2 = 16-42 Vac 50/60 Hz (10-60 Vdc).

Input Span: -

 $1 = 0 - 200\Omega (100 - 300 \#).$  $6 = 0 - 3.5k\Omega (2k8 - 4k3 \#).$  $2 = 0 - 500\Omega (250 - 750 \#).$  $7 = 0 - 5k\Omega (4k2 - 5k7 \#).$  $3 = 0 - 1k\Omega (500 - 1k5 \#).$  $8 = 0 - 10k\Omega (5k - 12k9 \#).$ 

 $4 = 0 - 1.5k\Omega (1k - 2k5 \#)$ 

 $5 = 0 - 2.5k\Omega (1k8 - 3k4 \#).$ \*) Z = Other (Specify).

0 = Link Selectable. \*) Z = Other (Specify).

Action: -

1 = Direct. 2 = Reverse.

Options: -

0 = None.

1 = Output ramp.

2 = Offset inputs up to 100% of span.

\*) Z = Other (Specify).

# = Indicates span range that can be achieved for the specified input using an internal adjustment.

\*) = Price Extra.

### Response time Table 0

	LK1/6	LK1/7
5ms		
50ms	Х	
500ms		X

#### **Output Table 5**


	LK2					
Output	1	2	3	4	5	6
4-20mA	X		X			
0-20mA		X				
0-10mA				X		
0-5V		X				X
1-5V	X		X			X
0-10V		Х			Х	

#### To change ranges

- 1. Unplug supply plug.
- Remove terminal covers.
- Slightly depress lid to base clips 3. and withdraw from housing.
- 4. Set coding plugs as required.5. Reassemble unit and connect power.
- 6. Adjust SPAN and ZERO pots to recalibrate.
- Change the label information to the new input/output values.

# **Coding Plug Location Diagram**

BRT283 - X X

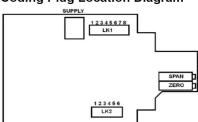

In the interest of development and improvement, BASI reserve the right to amend, without notice, details contained in this publication. BASI will accept no legal liability for any errors,

**BASI Instrument AB** Tel: +46 40-880 09 Fax: +46 40-92 98 77 SE-275 06 VOLLSJÖ.....SWEDEN P.O. Box 53 E-mail: sales@basi.se

**BRT283** No. **DS 83:10-E** Issue: **9** 10/08/11 Resistance Transmitter v1